

Saetec - divisione **Essedomus**

Robbiate (Lecco) ITALY

www.essedomus.it

info@essedomus.it

MOUNTING INSTRUCTIONS


LARGE RECESSED FRAME cod. EB F04

To be used for Entry Box CUBE only

To be used for fixing the mailbox in a niche realized in a wall or in the fence.

- 1 Determine the desired application area on the wall or iron fence. Realize a niche through this area to fully insert the frame and fix the 2 side brackets which must be walled or welded to the railing structure. If the brackets are too long, cut it accordingly. You may also evaluate to place it towards the front or rear side of the cassette of the mailbox according to the best position of the in-depth set.
- 2 Once the niche is ready, fix the side brackets on the of the frame through the 3+3 supplied screws M5 using, tighten with the supplied hex key.
- 3 Set the frame in the niche fixing the brackets walled or welded to the railings of the fence.
- 4 Remove the 4 screws from the ledge, insert the mailbox into the frame compartment leaning it on the ledge, open the rear door and fasten the mailbox inside with 4 M5 screws using the key supplied.
- 5 Close the rear door. Your mailbox is ready to use.

Screws to be tightened
3+3 screws for side bracket fixing
2+2 screws for mailbox fixing on the ledge

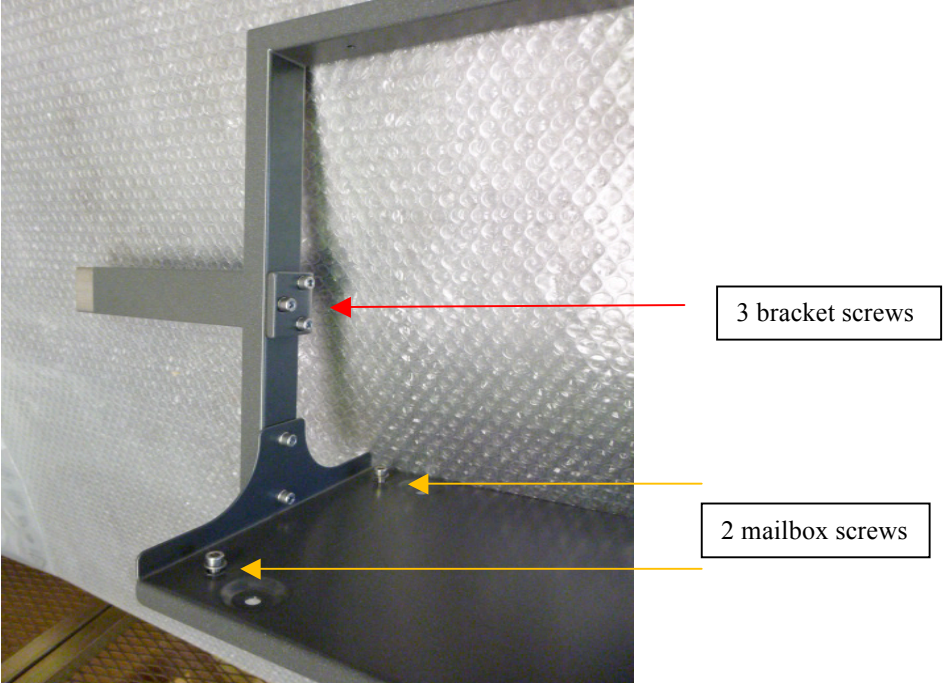

Complete frame

